


hp LaserJet 3380  
all-in-one



i n v e n t

service

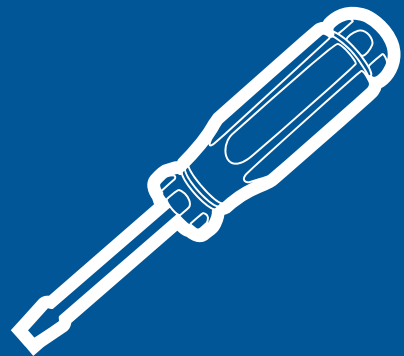



hp LaserJet 3380 all-in-one

**Service Manual** \_\_\_\_\_

## Copyright Information

© 2004 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited except as allowed under copyright laws.

The information contained in this document is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: Q2660-90901

Edition 1, 1/2004

## Trademark Credits

Microsoft, Windows, and MS-DOS are U.S. registered trademarks of Microsoft Corporation.

PostScript® is a trademark of Adobe Systems Incorporated.

All other products mentioned herein may be trademarks of their respective companies.

## Safety Information

### WARNING!

#### Potential Shock Hazard

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

Read and understand all instructions in the user guide.

Observe all warnings and instructions marked on the product.

Use only a grounded electrical outlet when connecting the HP LaserJet 3380 all-in-one product to a power source. If you don't know whether the outlet is grounded, check with a qualified electrician.

Do not touch the contacts on the end of any of the sockets on the HP LaserJet 3380 all-in-one. Replace damaged cords immediately.

Unplug this product from wall outlets before cleaning.

Do not install or use this product near water or when you are wet.

Install the product securely on a stable surface.

Install the product in a protected location where no one can step on or trip over the power cord, and the power cord will not be damaged.

If the product does not operate normally, see the online user guide.

Refer all servicing questions to qualified personnel.

# Table of contents

## 1 Product information

Product configuration .....	2
Hardware description .....	2
Firmware description .....	2
Software and supported operating systems.....	2
Product features .....	4
Overview of product .....	5
Hardware components .....	5
Product identification.....	6
Model and serial numbers .....	6
Product specifications .....	7
Physical specifications.....	7
Environmental specifications.....	7
Performance.....	7
Electrical specifications.....	8
Acoustic emissions.....	9
Skew specifications.....	9
Fax specifications.....	10
Printable area (margins).....	10
Battery specifications.....	10
Warranty statement .....	12
HP's Premium Protection print-cartridge warranty.....	13
Extended warranty.....	14
Print-cartridge information .....	15
Refilled print cartridges .....	15
HP LaserJet printing supplies .....	15
HP Printing Supplies Returns and Recycling Program information.....	15
FCC regulations.....	17
Telephone Consumer Protection Act (United States).....	19
IC CS-03 requirements.....	20
Declaration of Conformity .....	21
Safety statements.....	22
Laser safety statement.....	22
Canada DOC regulations.....	22
Laser statement for Finland.....	23
Korean EMI statement.....	23
Australia.....	23
Regulatory information for the European Union countries/regions.....	24

## 2 Operation

Operating environment .....	26
Identifying the control-panel components .....	27
Fax controls .....	27
Alphanumeric buttons .....	28
Menu and cancel controls .....	28

Copy, scan, and start controls .....	29
Control-panel menu structure .....	30
To use the control-panel buttons.....	30
To print the control-panel menu structure.....	30
Product media specifications .....	34
Supported media sizes and types .....	34
Guidelines for using media .....	36
Paper and transparencies .....	36
Common media problems .....	36
Labels .....	37
Envelopes .....	37
Card stock and heavy media .....	38
Loading media .....	40
Media input tray .....	40
Priority input tray .....	40
Specific types of media .....	40
Selecting originals for the automatic document feeder (ADF) .....	41
Specifications for ADF originals .....	41
Media information for the flatbed .....	42
Loading originals to copy or scan .....	43
To load originals onto the flatbed scanner .....	43
To load originals into the ADF input tray .....	43
Printer output paths .....	45
Output bin and straight-through output path .....	45

### 3 Maintenance

Life expectancies of parts that wear .....	48
Scanner calibration .....	49
Cleaning the product .....	50
Cleaning the glass.....	50
Cleaning the lid backing.....	51
Cleaning the paper path.....	51
Cleaning the print-cartridge area.....	52
Cleaning the pickup roller.....	54
Cleaning the printer separation pad .....	55
User-replaceable parts .....	56
Replacing the pickup roller.....	56
Replacing the printer separation pad.....	58
Replacing an ADF.....	61
Replacing an ADF pickup-roller assembly.....	62
Removing and replacing the product control-panel bezel.....	65

### 4 Operational overview

Basic functions .....	68
Basic sequence of operation (formatter-to-printer) .....	69
Basic sequence of operation (scanner).....	71
Formatter system .....	73
Central processing unit .....	73
Line interface unit (LIU) .....	73
Motor controller PCA .....	73
Flash memory .....	73
Standard boot process .....	73
RAM .....	74
Parallel interface or universal serial bus (USB) interface .....	74
Control panel .....	74

EconoMode (Draft mode) .....	74
MEt .....	75
Enhanced I/O .....	75
PJL overview .....	75
Scanner and ADF functions and operation .....	76
Scanner functions .....	76
Scanner operation .....	77
ADF operation .....	77
ADF paper path and ADF sensors .....	78
ADF jam detection .....	78
Printer functions and operation .....	79
Engine control unit (power system) .....	79
Image-formation system .....	85
Printer paper-feed system .....	86
Jam detection .....	87
Fax functions and operation .....	89
PSTN operation .....	89
The fax subsystem .....	89
Formatter in the fax subsystem .....	89
LIU in the fax subsystem .....	89
Fax page storage in flash memory .....	92

## 5 Removal and replacement

Removal and replacement strategy .....	97
Required tools .....	97
Before performing service.....	97
After performing service.....	98
Print cartridge .....	98
Parts removal order .....	98
Scanner assemblies .....	101
Printer right-side cover .....	101
Scanner side covers .....	102
Automatic document feeder (ADF) assembly .....	104
ADF pickup-roller assembly .....	105
ADF document-feed guide/cleanout comb .....	107
ADF input-tray flag.....	108
ADF separation pad .....	109
Control-panel bezel .....	110
To reinstall the control-panel bezel .....	111
Control panel .....	112
Control-panel chassis .....	113
Speaker.....	114
Scanner PCA .....	115
ADF scanner glass .....	118
Separation of the scanner from the printer .....	119
Separate the scanner from the printer.....	119
External components .....	122
Height guides.....	122
Left-side door .....	122
Back cover .....	123
Printer top cover .....	125
Front-cover assembly .....	125
Printer assemblies .....	130
Laser/scanner assembly.....	130
Height flapper.....	130

Left and right support covers (front corner brackets) .....	131
Transfer upper guide assembly.....	132
Transfer roller .....	132
Line interface unit (LIU) .....	133
Formatter .....	134
Left bottom frame support .....	135
Fuser assembly .....	136
Output rollers .....	139
Stepping motor .....	141
Solenoid .....	141
Fan assembly .....	142
Pickup assembly .....	144
Paper lift-plate assembly and pickup roller shaft .....	145
To reinstall the paper lift-plate assembly.....	148
Right plate assembly .....	149
Left plate assembly .....	150
Bottom assemblies .....	152
ECU fuses and ECU pan .....	152
Paper-feed assembly .....	155

## 6 Troubleshooting

Basic troubleshooting .....	161
Control-panel messages .....	166
Alert and warning messages .....	166
Critical error messages .....	174
Event-log codes.....	177
Solving image-quality problems .....	179
Checking the print cartridge .....	179
Solving print image-quality problems .....	179
Solving scanning (copying) image-quality problems .....	188
Repetitive image-defect ruler .....	194
Solving paper-feed problems .....	195
Jams occur in the printer.....	195
Solving print paper-feed problems .....	197
Jams occur in the automatic document feeder (ADF).....	199
Solving scanner (copier) paper-feed problems .....	202
Solving problems with digital subscriber line (DSL) connections.....	204
Connecting additional devices.....	205
Dedicated fax line.....	205
Shared phone line.....	205
To connect additional devices.....	205
Functional checks .....	208
Engine test .....	208
Control-panel check.....	208
Half self-test functional check .....	209
Drum-rotation functional check .....	210
Heating-element check .....	210
High-voltage power-supply check .....	211
Paper-path check .....	213
Updating or recovering the firmware code .....	215
Firmware update by using flash executable .....	215
Firmware-recovery DIMM .....	215
Troubleshooting tools .....	217
Printing a configuration report, demonstration page, or menu structure .....	217
Printing all fax reports at once .....	217



T.30 protocol trace .....	217
Service-mode functions .....	238
Secondary service menu .....	238
Developer's menu .....	239
Adjusting the country/region code parameters.....	240
Soft reset.....	241
NVRAM init .....	241
Printer job language (PJL) software commands .....	242
System settings for localized products.....	243
Main wiring .....	245
Locations of connectors .....	247
Locations of connectors and switches .....	248

## 7 Parts and diagrams

Ordering parts and supplies.....	250
Parts.....	250
Related documentation and software.....	250
Parts that wear .....	250
Accessories.....	251
Memory.....	251
Print cartridges and toner supplies.....	251
Cables.....	251
Common hardware .....	252
Parts kits.....	253
How to use the parts lists and diagrams.....	253
Scanner assemblies.....	254
External assemblies.....	262
Internal assemblies.....	268
Alphabetical parts list.....	286
Numerical parts list.....	295

## Index