


**hp** LaserJet  
8100 and 8150

print systems and paper  
handling devices



i n v e n t

**service manual**

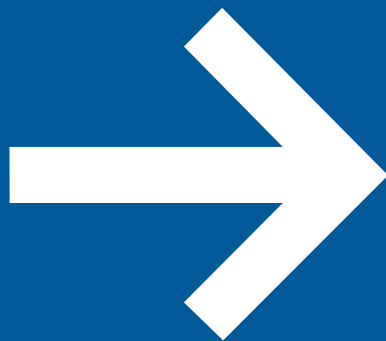



HP LaserJet 8150 and 8100  
Series Print Systems and Paper  
Handling Devices

**Service Manual** \_\_\_\_\_

© Copyright Hewlett-Packard Company, 2000

All Rights Reserved.  
Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

Part number: C4265-90963

First Edition, August 2001

## Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with respect to this information. HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Hewlett-Packard shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

## Trademark Credits

Adobe is a trademark of Adobe Systems Incorporated which may be registered in certain jurisdictions.

Arial is a U.S. registered trademark of the Monotype Corporation.

CompuServe™ is a U.S. trademark of CompuServe, Inc.

ENERGY STAR is a U.S. registered service mark of the United States Environmental Protection Agency.

Microsoft® is a U.S. registered trademark of Microsoft Corporation.

PANTONE® Pantone, Inc.'s check-standard trademark for color.

PostScript is a trademark of Adobe Systems, Incorporated, which may be registered in certain jurisdictions.

TrueType is a U.S. trademark of Apple Computer, Inc.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

Windows, MS Windows, and Windows NT are U.S. registered trademarks of Microsoft Corporation.

## Conventions

This is a combined Service Manual for both the HP LaserJet 8100 series printer and the HP LaserJet 8150 series printer. The HP LaserJet 8150 series printer shares most characteristics of the HP LaserJet 8100 series printer, except where stated.

This manual uses the following conventions:

**Color** is used to emphasize items that are important to the material under discussion.

**Bold** is used for emphasis, particularly in situations where *italic* type would be confusing.

*Italic* type is used to indicate related documents or emphasis.

DISPLAY type indicates text as seen on the printer control panel display.

**Commands** you use on a computer keyboard or on the printer control panel are shown in **KEYCAP**. Two examples are **SELECT**, and **- VALUE +**.

COURIER type indicates text that you type on a computer keyboard exactly as shown.

---

**Hint** Hints are used to suggest an action that might simplify the process.

---

**Note** Notes contain important information set off from the text.

---

**CAUTION** Caution messages alert you to the possibility of damage to equipment or loss of data.

---

**WARNING!** Warning messages alert you to the possibility of personal injury.



# Table of Contents

## 1 Product Information

Printer Features	26
Features of the HP Digital Copier	29
Product Overview	31
External View of the Printer	31
External View of HP Digital Copier	34
Identification	37
Model and Serial Numbers	37
Paper-handling Devices, Accessories, and Options	38
Ordering Information	40
Hard Disk	47
Determining Memory Requirements	48
Paper Capacities and Sizes	50
Printer and Paper-handling Devices	50
Media Selection Guidelines	52
Printer Media Selection Guidelines	52
Copy Module Media Selection Guidelines	56
Service Approach	61
Ordering Parts	61
Exchange Program	62
Consumables	62
Toner Cartridge Life	62
Refilled Toner Cartridges and Non-HP Staple Cartridges	63
Recycling Toner Cartridges	63
Technical Assistance	64
HP FIRST (Fax Information Retrieval Support Technology)	64
Internet	64
World Wide Web	65
HP Reseller Sales and Service Support Line (US Only)	65
Other Areas	65
Regulatory Information	66
FCC Regulations	66
Environmental Product Stewardship	68
Material Safety Data Sheet	70
Environmental Conformity	71
Declarations of Conformity	72
Safety Statements	73
Warranty	77

## 2 Site Requirements

Operating Environment .....	80
Space Requirements .....	81
Environmental Requirements .....	84
Specifications .....	85
Printer and Paper-handling Devices .....	85
Copy Module .....	90

## 3 Operating Overview

Using the Printer Control Panel .....	92
Control Panel Layout .....	92
Indicator Lights .....	93
Settings and Defaults .....	94
Printer Driver Information .....	94
Paper Source Default .....	95
Performing a Cold Reset .....	96
Setting the Display Language .....	96
Printer Control Panel Menus .....	100
HP LaserJet 8100 Series Quick Copy Jobs Menu .....	101
HP LaserJet 8100 Series Private/Stored Jobs Menu .....	101
HP LaserJet 8150 Series Quick Copy Menu .....	102
HP LaserJet 8150 Series Private/Stored Jobs Menu .....	102
Information Menu .....	104
Paper Handling Menu .....	105
Print Quality Menu .....	108
Printing Menu .....	110
Configuration Menu .....	113
Configuration of MBM Menu .....	118
I/O Menu .....	119
EIO Menu .....	121
Duplex Registration Menu .....	123
Resets Menu .....	125
Using the HP Digital Copier Front Panel .....	126
HP Digital Copier Front Panel .....	127
HP Digital Copier Settings .....	136
Loading Documents into the ADF .....	138
Loading Documents onto the Flatbed .....	140
Printer Service Mode .....	141
Setting Page Count, Maintenance Count, and Serial Number .....	143
Setting the Cold Reset Default Paper Size .....	144
HP Digital Copier Service Mode .....	145
HP Digital Copier Administrator Mode .....	147
Remote Upgrade of the Printer Firmware .....	148
Upgrade HP Digital Copier Firmware .....	150
Testing the Printer .....	153
Paper Path Test .....	153
Configuration Page .....	153



## 4 Maintenance and Adjustments

Cleaning the Printer and Paper Handling Accessories . . . . .	158
Cleaning Spilled Toner . . . . .	160
Cleaning the HP Digital Copier . . . . .	161
Materials . . . . .	161
Vacuum Specifications . . . . .	161
Cleaning ADF and Glass . . . . .	162
Cleaning the Document Cover, Document Holder, and Flatbed Glass . . . . .	162
Cleaning the ADF . . . . .	163
Copy Module Optics Cleaning . . . . .	165
Cleaning the ADF Lamp and Mirrors . . . . .	165
Lubricating the ADF Gears . . . . .	165
Cleaning the Carrier Unit and Mechanical Assemblies . . . . .	166
Lubricating the Carrier Unit Shaft . . . . .	166
Lubricating the Top of the Carrier Guide Rail . . . . .	166
Lubricating the Flatbed Motor Gears . . . . .	166
Cleaning the Front Panel . . . . .	166
Maintaining the Printer . . . . .	167
Maintaining the Copy Module . . . . .	168
HP Digital Copier Maintenance Parts . . . . .	168
Adjusting Printer Input Trays . . . . .	169
Adjusting for Edge-to-Edge Printing . . . . .	169
Adjusting Input Trays for Normal Printing . . . . .	170
Adjusting the 2000-sheet Printer Input Tray . . . . .	172
Adjusting Duplex Registration of the Paper Trays . . . . .	174
Adjusting the Copy Module . . . . .	175
Types of Adjustment . . . . .	175
When to Calibrate or Adjust the Copy Module . . . . .	175
Calibration Target . . . . .	175
Entering the Calibration Menu in Service Mode . . . . .	176
How to Perform an Offset Adjustment Calibration . . . . .	177
How to Perform a Density Calibration Adjustment . . . . .	177
How to Perform an ADF Vertical Magnification Adjustment . . . . .	177

## 5 Functional Overview

Printer Functional Overview . . . . .	180
Power Distribution System . . . . .	181
AC Power Distribution . . . . .	182
Overcurrent/Overvoltage Protection . . . . .	182
High Voltage Power Distribution . . . . .	183
Formatter System . . . . .	185
DC Controller System . . . . .	188
Laser and Scanner Drive . . . . .	188
Paper Motion Monitoring and Control . . . . .	188
Clutches . . . . .	188
Engine Test Microswitch . . . . .	189

Motors . . . . .	189
Image Formation System . . . . .	190
Toner Cartridge . . . . .	191
Drum Cleaning . . . . .	193
Drum Conditioning . . . . .	194
Image Writing . . . . .	195
Image Developing . . . . .	197
Image Transferring and Media Separation . . . . .	199
Image Fusing . . . . .	200
Paper Paths and Components . . . . .	201
Printer, Duplexer, and Envelope Feeder . . . . .	201
Paper Size Switches (Trays 2 and 3) . . . . .	204
Printing from Tray 1 . . . . .	205
Printing from Trays 2 and 3 . . . . .	205
Printing from the Envelope Feeder . . . . .	205
Printing with the Duplexer . . . . .	206
2000-sheet Input Tray (Tray 4) Components . . . . .	207
2000-Sheet Input Tray Operation . . . . .	209
2 x 500-sheet Input Tray . . . . .	212
2 x 500-sheet Input Tray Operation . . . . .	214
7-bin Tabletop Mailbox Components . . . . .	216
7-bin Tabletop Mailbox Operation . . . . .	218
8-bin Mailbox Components . . . . .	222
8-bin Mailbox Operation . . . . .	225
Finisher Components . . . . .	227
Stapler Unit Operation . . . . .	229
Main Functional Cycles of the Stapler (Internal Paper Path) . . . . .	232
Communication Link (Daisy Chain) . . . . .	233
Paper Jam Detection . . . . .	235
Printer Timing . . . . .	235
IEEE 1284 Parallel Cable Information . . . . .	237
Copy Module Functional Overview . . . . .	238
Copy Module System . . . . .	238
Function and Layout of the Copy Processor . . . . .	240
Copy Module Power Up Process . . . . .	242
Copy Processor Board . . . . .	242
Copy Module . . . . .	244
Printer components of copy module power up process . . . . .	245
Notes About the MFP Printer Product ID . . . . .	245
ADF Simplex Operation . . . . .	246
ADF Duplex Operation . . . . .	247
Flatbed Operation . . . . .	247
Copy Module Image Path . . . . .	249
Communication with the Printer . . . . .	251
Communication Channels . . . . .	251
Print Job Interrupt . . . . .	251
Paper Path and Sensors . . . . .	252

## 6 Removal and Replacement

Removal and Replacement Strategy	256
Electrostatic Discharge (ESD) Precautions	256
Required Tools	257
User Installable Accessories	258
Hardware Table	266
Printer Assembly Removal and Replacement	268
Control Panel	269
Covers	271
Delivery Unit (for Face-down Bin)	280
Diverter Assembly	283
Diverter Door Assembly	284
Lower Right Door Assembly	285
Fan 1, Laser/Scanner and Housing (Exhaust)	288
Fan 2, Low Voltage Power Supply (Exhaust)	290
Fan 3, Formatter Fan and Housing (Intake)	291
Fan 4, Delivery Unit (Exhaust)	292
Fan 5, Tray 1 (Intake)	293
Tray 1	295
Tray 1 Pickup Assembly	298
Feeder Assembly	302
Formatter Assembly	304
Fusing Assembly	306
Laser/Scanner Assembly	308
Main Gear Assembly	310
Main Motor Assembly	313
Paper Input Unit (PIU)	314
PCA, DC Controller	315
Output Paper Sensor PCA	316
High Voltage Power Supply (HVPS)	323
Low Voltage Power Supply (LVPS)	324
Registration Assembly	325
Tray 1 Feed Roller and Separation Pad	328
Tray 2 and 3 Pickup, Feed, and Separation Rollers	330
Paper Input Unit Sensor (PS2)	332
Registration Sensor (PS1)	334
Face-up Solenoid Assembly (SL3)	336
Transfer Roller Assembly	337
Tray 2 and 3 Assemblies	339
2000-sheet Input Tray Removal and Replacement	341
Orientation	341
Front Cover	343
Back Cover	344
Left Cover	345
Right Cover	346
Main Drive Assembly	347

Paper Tray . . . . .	349
Main Cable Harness . . . . .	350
Controller PCA . . . . .	352
Front LED PCA Assembly . . . . .	354
Pickup Assembly . . . . .	356
Power Supply . . . . .	358
Pickup, Feed, and Separation Rollers . . . . .	360
Paper Quantity Switch Assembly . . . . .	363
Paper Size Switch Assembly . . . . .	363
Vertical Transfer Unit (VTU) . . . . .	366
Tension Springs . . . . .	368
Locating Pins . . . . .	369
Casters and Stabilizing Feet . . . . .	370
Adjustable Foot . . . . .	371
2 x 500-sheet Input Tray Removal and Replacement . . . . .	372
Orientation of the 2 x 500-sheet Input Tray . . . . .	373
Back Cover . . . . .	374
Left Cover . . . . .	375
Vertical Transfer Unit (VTU) . . . . .	376
Right Cover . . . . .	379
Front Top Cover . . . . .	382
Trays 4 and 5 . . . . .	385
Pickup Assembly . . . . .	387
Paper Deck Drive Assembly . . . . .	389
Pickup, Feed, and Separation Rollers . . . . .	391
Controller PCA . . . . .	392
Tray-Size Sensing PCA . . . . .	393
Power Supply . . . . .	395
Main Cable . . . . .	396
Storage Paper Tray . . . . .	398
Front Door (Storage Area) . . . . .	399
Casters . . . . .	400
Foot Tip and Adjustable Foot Tip (Stabilizing Feet) . . . . .	401
Locating Pins . . . . .	402
Front LED PCA . . . . .	403
Envelope Feeder . . . . .	404
7-bin Tabletop Mailbox Removal and Replacement . . . . .	405
Orientation of the 7-bin Tabletop Mailbox . . . . .	406
Front Cover . . . . .	407
Back Cover . . . . .	410
Top Cover . . . . .	412
Controller PCA . . . . .	416
Power Supply . . . . .	417
Right Door Assembly (Paper Path Cover) . . . . .	418
Face-down Bins . . . . .	423
Empty Bin Sensor PCA . . . . .	426
Full Bin and Interlock Sensor PCA . . . . .	428

LED PCA . . . . .	430
Face-up Sensors PCA . . . . .	431
Reversing Mechanism Motor . . . . .	432
Face-up/Diverter Assembly (Flipper) . . . . .	434
Short Tray 7 . . . . .	437
Solenoid Reversing Mechanism . . . . .	438
Flipper Solenoid . . . . .	439
Handle . . . . .	440
Latching Mechanism . . . . .	441
Cover Latch . . . . .	442
8-bin Mailbox Removal and Replacement . . . . .	443
Orientation . . . . .	444
Front and Back Covers . . . . .	445
Top Cover . . . . .	447
Power Supply . . . . .	448
Paper Bins and Blind Cover . . . . .	449
Flipper Assembly . . . . .	450
Delivery Head Motor . . . . .	453
Transport Belt Motor . . . . .	454
Input Paper Guide . . . . .	456
Metal Tape and Housing Assembly . . . . .	458
Controller PCA . . . . .	460
Anticurl Strings . . . . .	462
Delivery Head Assembly . . . . .	464
Interlock Switch . . . . .	469
Diagnostic LED PCA . . . . .	470
User Status LED PCA . . . . .	472
Adjustable and Fixed Casters . . . . .	474
Attachment Assembly . . . . .	475
Stapler Assembly Removal and Replacement . . . . .	476
Mailbox with Stapler, Stapler Removal or Installation . . . . .	477
Back Plate . . . . .	479
Stapler Controller PCA . . . . .	481
Top Cover Assembly . . . . .	484
Stapler Bed Assembly . . . . .	485
Hinges . . . . .	487
Duplexer . . . . .	488
HP Digital Copier Removal and Replacement . . . . .	489
Installing the HP Digital Copier . . . . .	490
Install the Optional Output Accessory . . . . .	493
Install the Copy Connect EIO Board into the Printer . . . . .	494
Install the Copy Connect Cable . . . . .	495
Hardware Table . . . . .	497
Orientation of the HP Digital Copier . . . . .	499
Copy Module Maintenance Parts . . . . .	500
Separation Pad Assembly . . . . .	500
Pick Roller Assembly . . . . .	501

Copy Module Skins . . . . .	505
Document Holding Pad . . . . .	505
Paper Chute Flip-out . . . . .	506
Output Tray Flip-out . . . . .	507
Output Tray . . . . .	507
Flatbed (FB) Cover Assembly . . . . .	508
ADF Latch Cap . . . . .	511
ADF Cover . . . . .	512
Front Panel . . . . .	514
Panel Cover . . . . .	519
Front Panel Brackets . . . . .	520
Upper Cover . . . . .	522
Copy Module Power Supply/Main Board Assemblies . . . . .	524
Copy Processor Board . . . . .	524
Power Supply and Main Board Tray . . . . .	525
RFI Cover . . . . .	527
Control PCA . . . . .	529
Fan . . . . .	532
Power Supply . . . . .	533
Back PCA . . . . .	534
Copy Module ADF Unit Assemblies . . . . .	535
Optical Unit . . . . .	535
ADF Lamp PCA . . . . .	537
ADF Lamp . . . . .	539
Sensor Unit Assembly . . . . .	540
ADF Motor Unit . . . . .	543
ADF Belt . . . . .	544
LED Assembly PCA . . . . .	546
ADF Unit . . . . .	547
Copy Module Flatbed Assemblies . . . . .	549
Front Panel Frame Ground Spring . . . . .	549
Output Tray Brackets . . . . .	550
Glass Plate Assembly . . . . .	551
Home Position Sensor . . . . .	553
Carrier Unit Lamp . . . . .	555
Carrier Unit . . . . .	558
Felt Pad . . . . .	562
Feet . . . . .	563
Frame Ground Spring . . . . .	564
Front Lamp PCA . . . . .	565
Junction PCA and Cover . . . . .	566
Front Panel Ribbon Cable . . . . .	568
Carrier Belt and Motor . . . . .	570

## 7 Troubleshooting

Troubleshooting Process . . . . .	574
Printer System Troubleshooting Process . . . . .	577
Printer/Paper-Handling Troubleshooting Process . . . . .	578
Copy Module Troubleshooting Process . . . . .	580
Troubleshooting the Print System . . . . .	582
Preliminary Operating Checks . . . . .	582
Communication . . . . .	583
Interface Troubleshooting . . . . .	583
Network Troubleshooting . . . . .	585
Verify Host System Operation . . . . .	587
Verify Network and Server Operation . . . . .	587
General Troubleshooting Information . . . . .	588
Miscellaneous Problems and Solutions . . . . .	588
Paper Curl . . . . .	593
Troubleshooting the Printer and Paper-handling Devices . . . . .	594
Engine Test . . . . .	597
Event Log Pages . . . . .	598
Printer Message Tables . . . . .	607
Engine Error Messages . . . . .	608
Input Device Messages . . . . .	620
Output Device Messages . . . . .	628
Finisher Devices Messages . . . . .	640
Paper Handling Controller Error Messages . . . . .	644
Paper Jams . . . . .	646
Paper Path Test . . . . .	648
Menu Map . . . . .	651
Configuration Pages . . . . .	653
File Directory Page . . . . .	656
Usage Page . . . . .	657
Check the Toner Cartridge . . . . .	662
Image Quality Tables . . . . .	663
Repetitive Defect Ruler . . . . .	676
Image System Troubleshooting . . . . .	678
High-Voltage Power Supply Check . . . . .	679
Self-Diagnostics on Paper-handling Devices . . . . .	681
2000-sheet Input Tray Standalone Diagnostics . . . . .	681
2 x 500-sheet Input Tray Standalone Diagnostics . . . . .	685
7-bin Tabletop Mailbox Standalone Diagnostics . . . . .	689
8-bin Mailbox Standalone Diagnostics . . . . .	694
Diagrams . . . . .	702
Troubleshooting the Copy Module . . . . .	715
Status Messages . . . . .	718
Testing the Copy Module . . . . .	728
Copy Processor LED Test . . . . .	728
Copy Module Boot Up Icon Conditions . . . . .	730

Copy Module Offline Test . . . . .	731
Other Tests . . . . .	733
Service Mode Tests . . . . .	735

## 8 Parts and Diagrams

How to Use the Part Lists and Diagrams . . . . .	738
Ordering Parts . . . . .	738
Common Hardware . . . . .	738
Illustrations and Parts Lists . . . . .	739
Printer and paper-handling components . . . . .	740
Printer Parts and Diagrams . . . . .	742
Paper-Handling Devices Parts and Diagrams . . . . .	756
Input Devices . . . . .	756
Output Devices . . . . .	763
HP Digital Copier Parts and Diagrams . . . . .	774
Alphabetical Parts List (Printer and Paper-handling Devices) . . . . .	789
Alphabetical Parts List (Copy Module) . . . . .	799
Numerical Parts List (Printer and Paper-handling devices) . . . . .	803
Numerical Parts List (Copy Module) . . . . .	813