



hp LaserJet 1200 series



i n v e n t

service





# HP LaserJet 1200 Series

## **Service**

### Copyright Information

© 2001 Hewlett-Packard Company

All Rights Reserved.  
Reproduction, adaptations, or translation without prior written permission is prohibited except as allowed under copyright laws.

Part number C7044-90906  
First edition, April 2001  
Printed in USA

### Warranty

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with respect to this information. HEWLETT-PACKARD SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Hewlett-Packard shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

NOTICE TO U.S. GOVERNMENT USERS: RESTRICTED RIGHTS COMMERCIAL COMPUTER SOFTWARE: "Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) (1)(ii) of the Rights in Technical Data Clause at DFARS 52.227-7013."

Hewlett-Packard Company  
11311 Chinden Boulevard  
Boise, Idaho 83714 U.S.A.

### Trademark Credits

Microsoft, Windows, and MS-DOS are U.S. registered trademarks of Microsoft Corporation.

TrueType is a U.S. trademark of Apple Computer, Inc.

All other products mentioned herein may be trademarks of their respective companies.



### Safety Information

#### WARNING!

#### Potential Shock Hazard

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

- 1 Read and understand all instructions in the user guide.
- 2 Observe all warnings and instructions marked on the product.
- 3 Use only a grounded electrical outlet when connecting the HP LaserJet 1200 printer to a power source. If you don't know whether the outlet is grounded, check with a qualified electrician.
- 4 Do not touch the contacts on the end of any of the sockets on the HP LaserJet 1200 printer. Replace damaged cords immediately.

- 5 Unplug this product from wall outlets before cleaning.
- 6 Do not install or use this product near water or when you are wet.
- 7 Install the product securely on a stable surface.
- 8 Install the product in a protected location where no one can step on or trip over the power cord and the power cord will not be damaged.
- 9 If the product does not operate normally, see the online user guide.
- 10 Refer all servicing questions to qualified personnel.

Information regarding FCC Class B, Parts 15 and 68 requirements can be found in the user guide.

# Contents

## 1 Product information

Chapter contents . . . . .	13
Introduction . . . . .	14
Hardware description . . . . .	14
Firmware description . . . . .	15
Product specifications . . . . .	16
Model and serial numbers . . . . .	19
Overview of printer . . . . .	20
Front and side view . . . . .	20
Back and side view . . . . .	21
Overview of optional copier/scanner . . . . .	22
Top view . . . . .	22
Warranty statement . . . . .	23
Extended warranty . . . . .	24
Toner cartridge information . . . . .	25
Refilled toner cartridges . . . . .	25
Recycling toner cartridges . . . . .	25

## 2 Installation and operation

Chapter contents . . . . .	27
Operating environment . . . . .	28
Identifying printer components . . . . .	29
Printer control panel . . . . .	29
Control panel light patterns . . . . .	30
Copier/scanner control panel . . . . .	32
Selecting media . . . . .	33
Selecting media to print . . . . .	33
Selecting media to copy or scan . . . . .	34
Loading media . . . . .	35
Loading media to print . . . . .	35
Loading media to copy or scan . . . . .	36
Printer output paths . . . . .	37

### 3 Maintenance

Chapter contents	39
Life expectancies of consumables	40
User-replaceable parts	40
Replacing the printer pickup roller	41
Replacing the printer separation pad	43
Replacing the copier/scanner separation pad	45
Cleaning the equipment	46
Cleaning the print path	47
Cleaning the toner cartridge area	48
Cleaning the printer pickup roller	49
Cleaning the printer separation pad	50
Cleaning and recalibrating the copier/scanner	51
Cleaning the scanner path	51

### 4 Operational overview

Chapter contents	53
Basic functions	54
Formatter system	55
Control panel	56
Draft mode	56
MEt	56
Enhanced I/O	56
PJM overview	57
Printer functions	58
Engine control unit/power system	59
Image formation system	64
Printer paper-feed system	67
Jam detection	69
Optional copier/scanner	71
Optical system	71
Document pickup and feed systems	71
Basic sequence of operation (formatter-to-printer)	73

### 5 Removal and replacement

Chapter contents	75
Removal and replacement strategy	77
Required tools	77
Before performing service	78
Toner cartridge	78
Parts removal order	79

Covers . . . . .	80
Left side cover . . . . .	80
Optional copier/scanner . . . . .	81
Back cover . . . . .	82
Right side cover . . . . .	84
Top cover . . . . .	87
Control panel assembly . . . . .	88
Front cover assembly . . . . .	89
Internal assemblies . . . . .	96
Transfer roller . . . . .	96
Formatter . . . . .	97
Laser/scanner assembly . . . . .	99
Fuser assembly . . . . .	101
Output rollers . . . . .	105
Motor . . . . .	107
Solenoid . . . . .	108
Fan assembly . . . . .	110
Right plate assembly . . . . .	112
Pickup assembly . . . . .	114
Pickup roller shaft . . . . .	117
Paper lift plate assembly . . . . .	118
Left plate assembly . . . . .	119
Bottom assemblies . . . . .	120
ECU pan . . . . .	120
Paper-feed assembly . . . . .	124

## 6 Troubleshooting

Chapter contents . . . . .	129
Basic troubleshooting . . . . .	130
Errors . . . . .	132
Control panel light messages . . . . .	132
Fatal error secondary messages . . . . .	135
Checking the toner cartridge . . . . .	137
Solving image-quality problems . . . . .	138
Solving paper-feed problems . . . . .	146
Solving print paper-feed problems . . . . .	146
Solving copying and scanning paper-feed problems . . . . .	148
Functional checks . . . . .	149
Engine test . . . . .	149
Half self-test functional check . . . . .	150
Drum rotation functional check . . . . .	151
Heating element check . . . . .	152
High-voltage power supply check . . . . .	153
Paper path check . . . . .	155

Service mode functions . . . . .	156
NVRAM initialization/cold reset . . . . .	156
PJM software commands . . . . .	156
Troubleshooting tools . . . . .	159
Internal reports . . . . .	159
Repetitive image defect ruler . . . . .	161
Main wiring . . . . .	162
Locations of connectors . . . . .	164
Locations of LEDs, jumpers, and switches . . . . .	165

## 7 Parts and diagrams

Chapter contents . . . . .	167
Ordering parts and supplies . . . . .	168
Parts . . . . .	168
Related documentation and software . . . . .	168
Consumables . . . . .	168
Accessories . . . . .	169
How to use the parts lists and diagrams . . . . .	171
Common hardware . . . . .	171
Assembly locations . . . . .	172
Printer trays & optional copier/scanner . . . . .	172
Covers . . . . .	174
Internal assemblies . . . . .	176
Internal components (1 of 2) . . . . .	176
Internal components (2 of 2) . . . . .	178
Electrical components . . . . .	180
Paper pickup assembly (1 of 2) . . . . .	182
Paper pickup assembly (2 of 2) . . . . .	184
Fuser assembly . . . . .	186
Alphabetical parts list . . . . .	188
Numerical parts list . . . . .	191